# SE227 Installation, Maintenance and Operating Instructions

### **DESCRIPTION**

Wall mounted EMERGENCY DELUGE SHOWER. Shower is supplied with a 25mm stay open full flow ball valve, activated by a triangle pull rod. Manufactured by PBA Safety to comply with AS 4775 - 2007

#### **EYE/FACE WASH**

Shower Head: 200mm ABS 25mm Stainless Steel Valve: Activator: 304 Stainless Steel Pull Rod

#### **FLOW DATA**

**Eve/Face Wash** Flow Pressure: 138 KPa Flow Rate: **78 LPM** 

## **INSTALLATION**

After unpacking carton, ensure all components are present. Prior to connecting the water supply flush, the pipeline to clear impurities and debris. Attach unit to water supply. Turn water supply on and assure all connections are watertight.


### TESTING


The Australian Standards AS4775-2007 states that all safety equipment shall be activated on a weekly basis to flush the line and verify proper operation. All units include a testing tag to be filled out weekly.

**NOTE:** This unit should be connected to an uninterrupted source of potable water, no less than 25mm with a minimum flowing pressure of 138KPa and a maximum static pressure of 860 KPa.

### **OPERATION**

The shower is activated by pulling down the pull rod. The unit will operate until the pull rod is manually pushed to the off position.

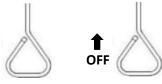

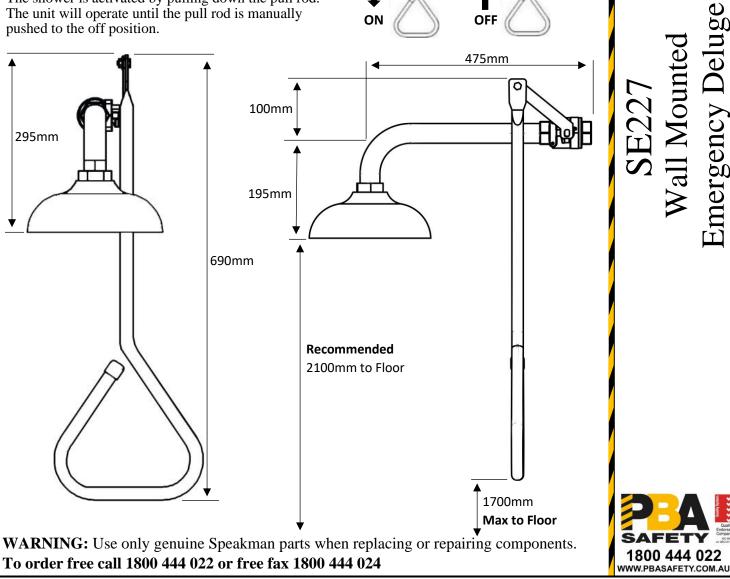

ON

# Installation, Maintenance and Operating Instructions

#### MAINTENANCE


Should you need to repair this unit, please see the parts list for correct part numbers. Before any maintenance is done **be sure the water supply is shut off.** 

#### MAINTENANCE SCHEDULE

Activate shower unit and allow water

Weekly to flow for 30 seconds to flush line. Ensure water flows evenly. Ensure water is clean.

Yearly Ensure unit complies with AS 4775 – 2007.

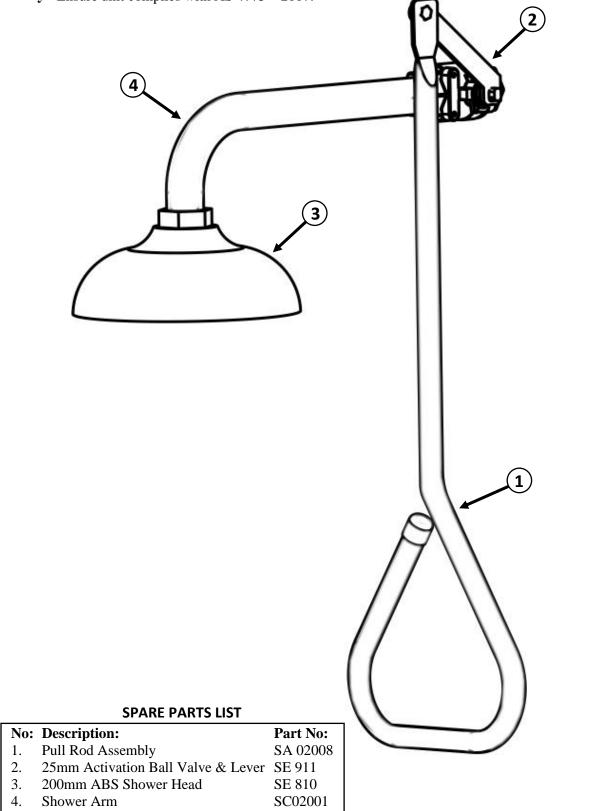

WARNING: Use only genuine Speakman parts when replacing or repairing components. To order free call 1800 444 022 or free fax 1800 444 024



1800 444 022

WWW.PBASAFETY.COM.AU