



SE253 PO

Platform Operated Shower

Installation, Maintenance and Operating Instructions

Manufactured by PBA Safety in Australia to comply with AS 4775 - 2007.

DESCRIPTION

Floor mounted EMERGENCY DELUGE SHOWER unit. Shower is supplied with a self-closing platform operated valve, activated by step on platform.

SHOWER

| | |
|--------------|---------------------------|
| Shower Head: | 200mm ABS Cicolac |
| Valve: | 25mm Brass |
| Activator: | Galvanized Grate |
| Stanchion: | 304 Stainless Steel Frame |
| Platform: | 304 Stainless Steel |

INSTALLATION

After unpacking, Mark out the floor as per frame footprint detail. Mount unit to the floor using suitable fasteners. Fit upper section and Showerhead. Prior to connecting the water supply flush pipeline to clear impurities and debris. Connect water supply to 25mm BSPFemale connection at the back of the platform frame. Turn water supply on and assure all connections are watertight. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury. Test unit




TESTING

The Australian Standards AS4775-2007 states that all safety equipment shall be activated on a weekly basis to flush the line and verify proper operation. All units include a testing tag to be filled out weekly.

NOTE: This unit should be connected to an uninterrupted source of potable water, no less than 25mm with a minimum flowing pressure of 138KPa and a maximum static pressure of 860 KPa.

OPERATION

The shower is activated by stepping on the platform. Once the valve is activated the head will continue to discharge water until the platform is released back to off. This is done by stepping off the platform

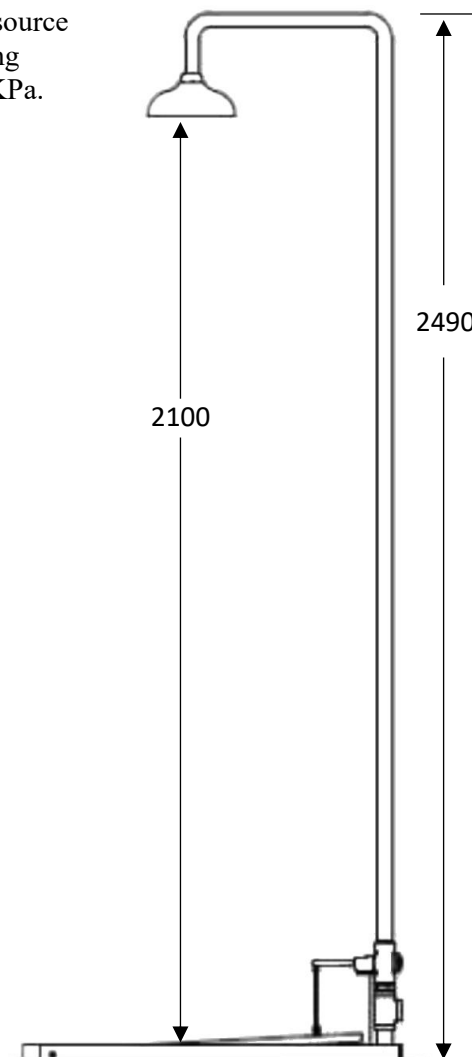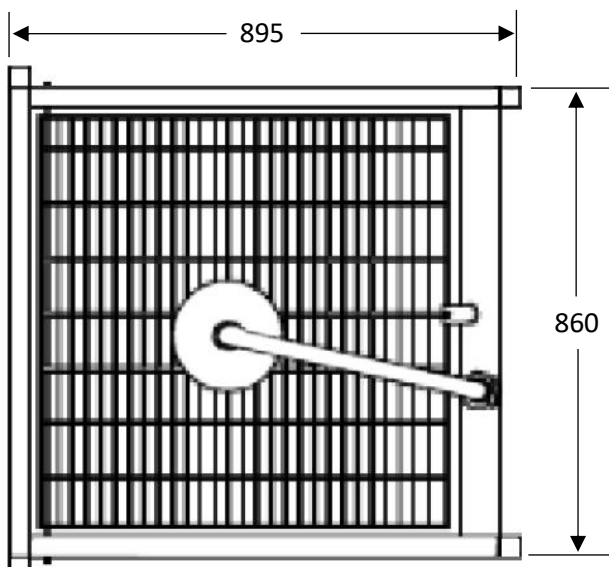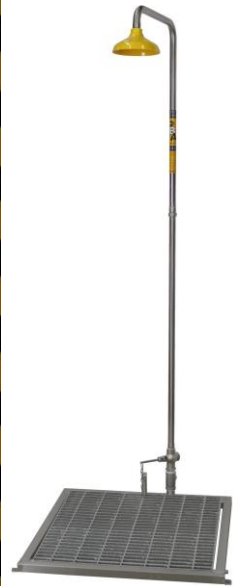

SE253 PO
Emergency Deluge Shower

WARNING: Use only genuine Speakman parts when replacing or repairing components.

PBA
SAFETY
1800 444 022
WWW.PBASAFETY.COM.AU

Installation, Maintenance and Operating Instructions

MAINTENANCE

Should you need to repair this unit, please see the parts list for correct part numbers. Before any maintenance is done **be sure the water supply is shut off.**

MAINTENANCE SCHEDULE


Activate shower unit and allow water

Weekly to flow for 30 seconds to flush line.

Ensure water flows evenly.

Ensure water is clean.

Yearly Ensure unit complies with AS 4775 – 2007.

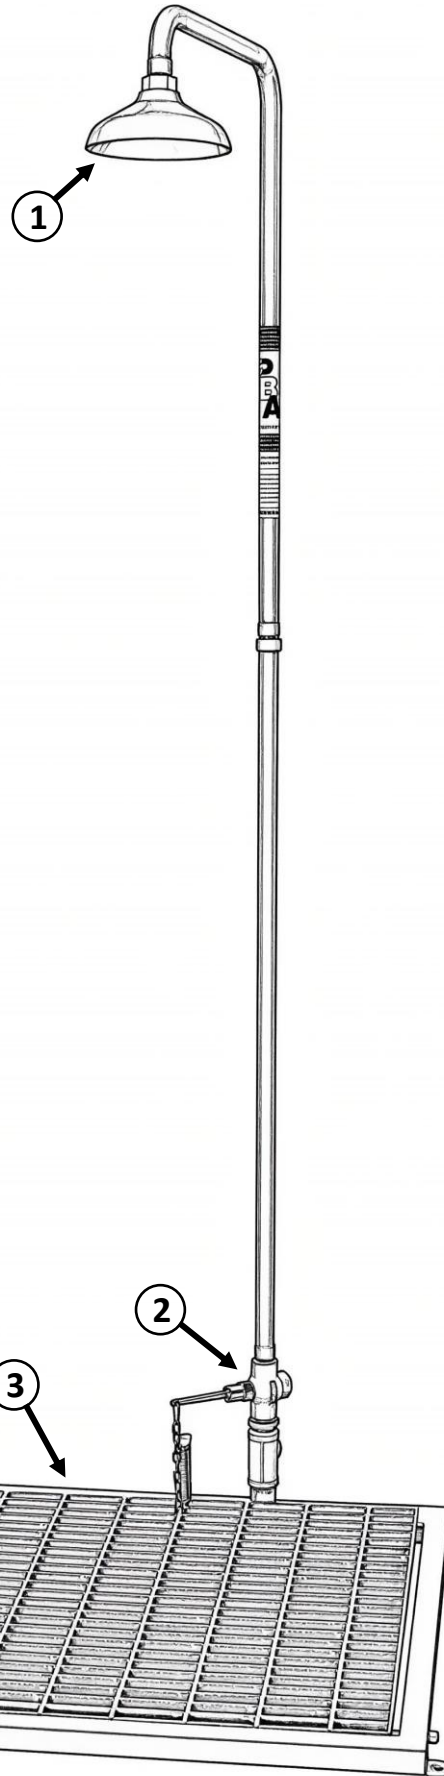

FLOW DATA

Shower

Flow Rate: 78 LPM

SPARE PARTS LIST

| No: | Description: | Part No: |
|-----|---------------------------|----------|
| 1. | 200mm Cicolac Shower Head | SE 810 |
| 2. | 25mm Brass Platform Valve | SE 901 |
| 3. | Galvanized Grate | SR05008 |

WARNING: Use only genuine Speakman parts when replacing or repairing components.

SE253 PO
Emergency Deluge Shower