SE106

Hand Operated Shower & Platform Operated Eye/Face Wash

Installation, Maintenance and Operating Instructions

Manufactured by PBA Safety in Australia to comply with AS 4775 - 2026.



DESCRIPTION

Floor mounted EMERGENCY DELUGE SHOWER & AERATED EYE WASH combination unit. Shower is supplied with a 25mm stay open full flow ball valve, activated by a triangle pull rod. Eye/Face wash is supplied with a self-closing platform operated valve, activated by walk on platform.

SHOWER		EYE/FACE WASH	
Shower Head:	200mm ABS Cycolac	Eye/Face Wash:	Aerated Eye/Face Wash
Valve:	25mm Stainless Steel	Valve:	25mm Female Brass
Activator:	304 Stainless Steel Pull Rod	Activator:	Galvanized Grate
Stanchion:	304 Stainless Steel Frame	Base Plate:	304 Stainless Steel

INSTALLATION

After unpacking, ensure all components are present. Mark out the floor as per frame footprint detail. Mount unit to the floor using suitable fasteners. Fit upper section, activation pull rod and shower head. Prior to connecting the water supply flush pipeline to clear impurities and debris. Connect water supply to 25mm BSPMale connection at the back of the platform frame. Turn water supply on and assure all connections are watertight. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury. Test unit.

TESTING

The Australian Standards AS4775-2026 states that all safety equipment shall be activated on a weekly basis to flush the line and verify proper operation. All units include a testing tag to be filled out weekly.


NOTE: This unit should be connected to an uninterrupted source of potable water, no less than 25mm with a minimum flowing pressure of 138KPa and a maximum static pressure of 860 KPa.


OPERATION

The shower is activated by pulling the triangle pull rod. Once the valve is activated the head will continue to discharge water until the valve is manually closed, this is done by pushing the pull rod to the off position.



The eye wash is activated by step on platform. The unit automatically shuts off when you step off the platform.

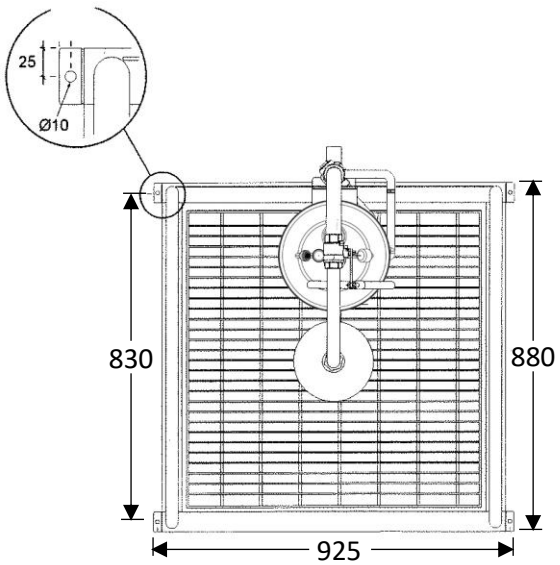

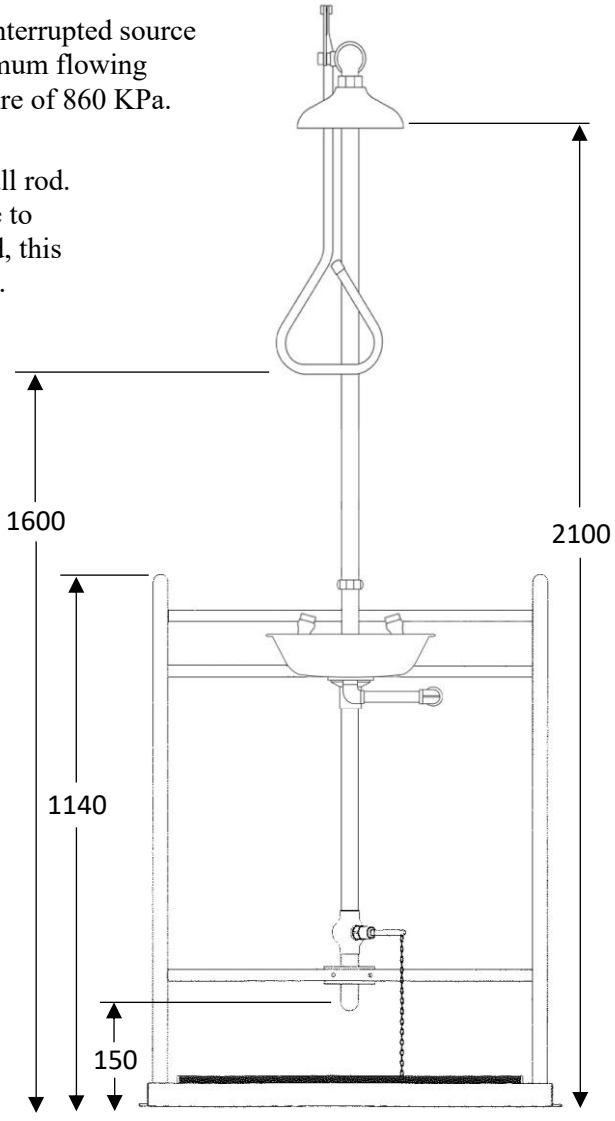

WARNING: Use only genuine Speakman parts when replacing or repairing components.

SE106
Combination Deluge Shower
& Aerated Eye/Face Wash

PBA SAFETY
1800 444 022
WWW.PBASAFETY.COM.AU

Installation, Maintenance and Operating Instructions

MAINTENANCE


Should you need to repair this unit, please see the parts list for correct part numbers. Before any maintenance is done **be sure the water supply is shut off.**

MAINTENANCE SCHEDULE

Weekly Activate eyewash unit and allow water to flow for 30 seconds to flush line.
Ensure water flows evenly from both outlets.
Ensure water is clean.

Yearly Ensure unit complies with AS 4775 – 2026.




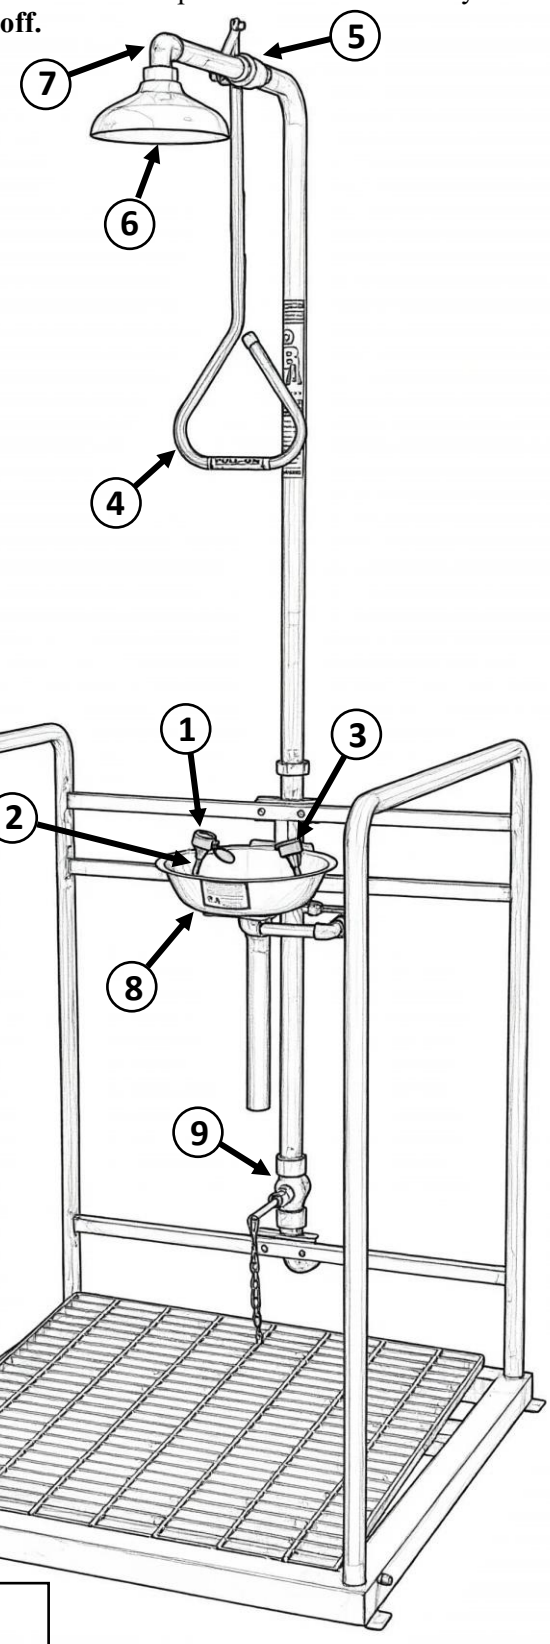

1 **Part No: SR 06013**
Aerator & Cap Assembly 25mm DIA



2 **Part No: SA 01014**
Bulls Horns Assembly 22L/Min

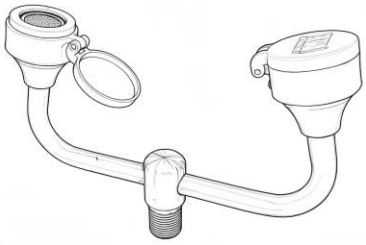

FLOW DATA

Eye Wash
Flow Rate: 22 LPM
Shower
Flow Rate: 78 LPM

SE106
Combination Deluge Shower & Aerated Eye/Face Wash

SPARE PARTS LIST

No:	Description:	Part No:
1.	Aerator, Screen & Cap Assembly	SR 06013
2.	Complete Bull Horns Assembly	SA 01014
3.	Dust Cap Assembly	SA 01008SET
4.	Pull Rod Assembly	SA 02008
5.	25mm Activation Ball Valve	SE 911
6.	200mm Cycolac Shower Head	SE 810
7.	Shower Arm 25mm BSP	SC 02001
8.	Stainless Steel Bowl	SR 03006
9.	Self Closing Platform Valve	SE902

WARNING: Use only genuine Speakman parts when replacing or repairing components.

PBA SAFETY
1800 444 022
WWW.PBASAFETY.COM.AU