

SE SHW

Installation, Maintenance and Operating Instructions

DESCRIPTION

Safety Shower Testing Kit complete with Green Test Sleeve with Stainless Ring & Testing Pattern Stand with the 25Lt Graduated Pail and a Eye Wash Pattern Testing Gauge. The shower test kit is designed to allow the testing of the emergency safety showers and eye wash, so they comply with AS 4775-2007.

SPECIFICATIONS

Graduated Pail:	25 Litre Plastic
Funnel Sleeve:	Tyvek - Green
Attachment Ring:	304 Stainless Steel
Handle:	PVC
Catchment Bin:	120 Litre Yellow

OPERATION

Hold large opening of the test sleeve under the shower head and place the small opening into the graduated bucket or the 120Lt catchment bin. Operate shower as needed for test.


Empty test bucket or catchment bin after testing and air dry funnel after use.

When using the shower test kit to gauge the flow of water to be compliant to AS4775 (76 LPM). Time how many seconds it takes to fill the 20Lt bucket, then (ie. if 10 seconds, multiply by 6 to make one minute).

There may be a volume control flow restrictor in the shower rose arm near the ball valve or may have a flow control shower head which will only allow the amount of water to comply with AS4775. Also check the shower head assembly for cracks as well as the ball valve and pipes for any leaks.

Supplied with the SESHW is an eyewash test gauge. Please use as per the instructions on the gauge.

- ① **Part No: SE952**
Eyewash Testing Gauge

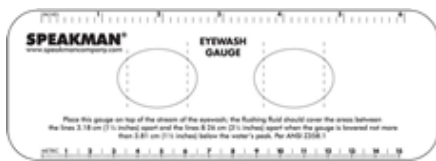

- ② **Part No: SE-TAG**
52 Week Test Tags (Bag of 10)



SPARE PARTS LIST

No:	Description:	Part No:
1.	Eyewash Testing Gauge	SE 952
2.	Weekly Test Tag (Bag of 10)	SE-TAG
3.	Testing Sock (SE950) Green	SR 13002
4.	25 Litre Graduated Bucket	SR 13003
5.	S/Steel Shower Pattern Tester	SA 06004
6.	5 Litre Graduated Jug	SR 13007



SE SHW
120Lt Shower Testing

WARNING: Use only genuine Speakman parts when replacing or repairing components.

To order free call 1800 444 022 or free fax 1800 444 024