



# SE 950

## Installation, Maintenance and Operating Instructions

### DESCRIPTION

Safety Shower Testing Kit complete with testing sock, eyewash gauge & 25 Litre bucket. The shower test kit is designed to allow the testing of emergency safety showers.

### SPECIFICATIONS

Graduated Pail:	25 Litre Plastic
Funnel Sleeve:	Tyvek - Green
Attachment Ring:	304 Stainless Steel
Handle:	PVC

### OPERATION


Hold large opening of the test sleeve under the shower head and place the small opening into the test bucket. Operate shower as needed for test. Empty test bucket after testing and air dry funnel after use.

When using the shower test kit to gauge the flow of water to be compliant to AS4775 (76 LPM). Time how many seconds it takes to fill the 20L bucket, then (ie. if 10 seconds, multiply by 6 to make one minute).

There may be a volume control flow restrictor in the shower rose arm near the ball valve or may have a flow control shower head which will only allow the amount of water to comply with AS4775. Also check the shower head assembly for cracks as well as the ball valve and pipes for any leaks.


Supplied with the SE950 is an eyewash test gauge. Please use as per the instructions on the gauge.

- ① Part No: SE952  
Eyewash Testing Gauge

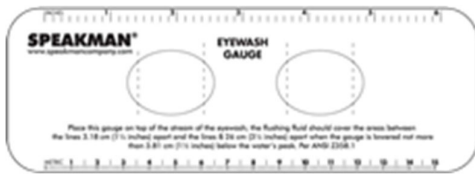

### SPARE PARTS LIST

No:	Description:	Part No:
1.	Eyewash Testing Gauge	SE 952
2.	Testing Sock (SE950) Green	SR 13002
3.	25 Litre Graduated Bucket	SR 13003

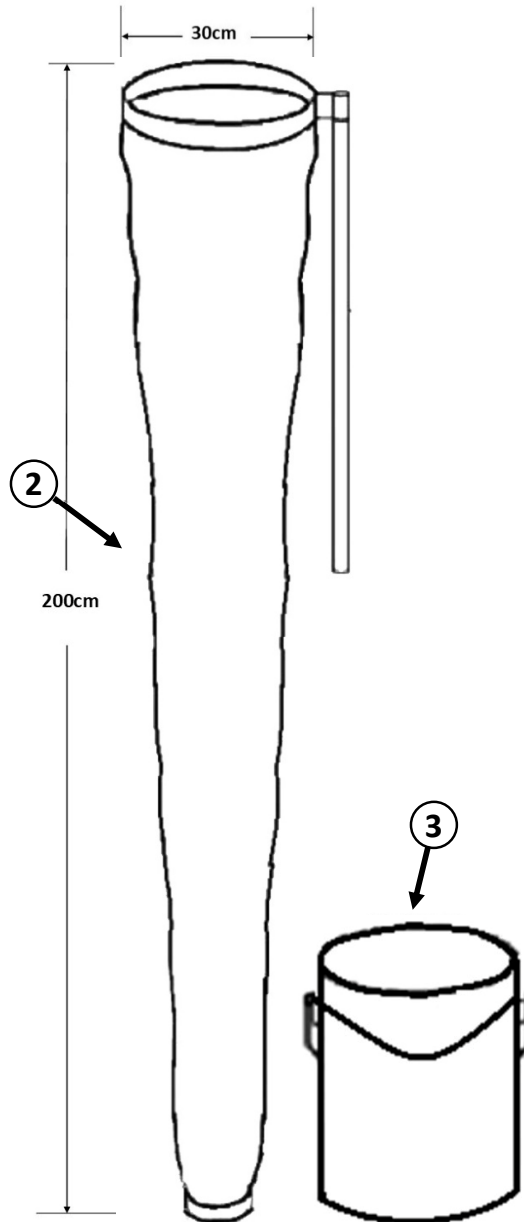

SE 950  
Shower Testing Kit

**WARNING:** Use only genuine Speakman parts when replacing or repairing components.

To order free call 1800 444 022 or free fax 1800 444 024

